

OVERLAY.

FRONT AND BACK. CUT TWO Jin. THICK

• SCREW

calling at the F
London: 16 New Oxford St., W.C.1

" 147 Bishopsgate, E.C.
" 83 Newington Butts, S.E.11
GLASGOW: 326 Argyle Street.
MANCRESTER: 8 Piccadilly,
BIRMINGHAM: 9a High Street,
Lype: 10 Open Victoria Street Briggsto LENGTH 12 in. HEIGHT DEPTH Helpful suggestions regarding the making and finishing of this Clock appears in Hobbies of above date CUT ONE lin. CASE. FRONT. CUT ONE 3/16in. THE The above prices are DOTTED LINES GIVE POSITIONS OF RIES TO WHICH THE THIN WOOD TOP IS BENT AND FIXED, subject to alteration without notice. ALSO THE OVERLAYS ON FACE. BACK.
USE THE CUT-OUT FRONT
AS A TEMPLATE FOR MARKING ROUND. WOOD 3/16in. WILL BE USED FOR THE BACK. THE PIECE A WILL BE GLUED BETWEEN FRONT AND BACK AS A STIFFENER. NOTE:-THE SIZE OF THE CIRCLE WILL BE THE SAME IN BOTH, FRONT AND BACK.

ADDRESSES.

All orders by post should be addressed - Hobbies Limited Dereham, Norfolk.


Customers residing in the neighbourhood may obtain Tools, Wood and Fittings by calling at the Hobbies Supply Stores.


SOUTHAMPTON: 25 Bernard Street. BRIGHTON: 68 London Road. SHEFFIELD: 4 St. Paul's Parade

STIFFENER INSIDE CASE. (PIECE A). USE WASTE WOOD FOR THIS PIECE.

Vote

BENT TOP TO CASE. CUT ONE 1/16in. AND FIX TO THE RIBS INSIDE FRONT AND BACK.

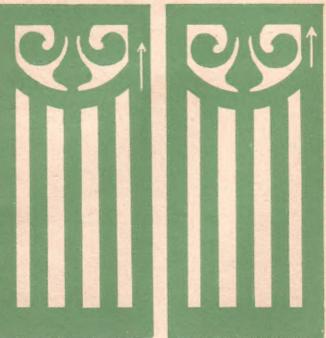

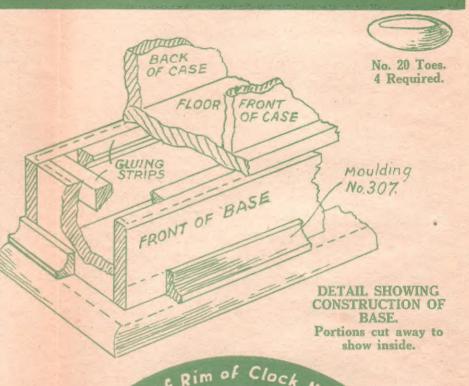

simply pushed through fixed to this overlay by

OVERLAY ON FRONT. CUT ONE lin. THICK.

Note :- The Clock

movement is

from the front and

three screws.

FRONT OF CASE

BACK OF CASE

FLOOR OF CASE. CUT ONE lin. THICK.

Moulding No. 307 on Front and Sides only

SIDE SCR THESE PIECES WILL BE USED AS GLUING STRIPS BETWEEN BASE AND FLOOR OF CASE. (See detail).

THIS DESIGN SHEET IS ONLY PRE-SENTED FREE WITH THE CURRENT ISSUE OF HOBBIES AND NOT WITH

BACK NUMBERS. FURTHER COPIES MAY BE OBTAINED

BASE. CUT ONE in. AND SHAPE ON THREE EDGES AS SECTION.

BACK

FRONT Moulding No. 307 TO BACK AND FRONT. CUT ONE OF EACH in. THICK.

RIBS FIXED INSIDE CASE

MOULDING No. 307. 1 Piece 11 in.

2 Pieces 23 "

\* SCREW

FLAT TOPS TO CASE. CUT ONE OF EACH in. CHAMFER ONE EDGE WHERE IT MEETS THE PLYWOOD.

> OVERLAY ON FRONT OF BASE. CUT ONE lin.

SIDE OF BASE Cut one /4in

Moulding No. 307

Cut one /4in. Moulding No.307

SIDE OF BASE



PRINTED IN ENGLAND